

WAY BLOCK WAY ROUND


SCHEDE DI INSTALLAZIONE
INSTRUCTION MANUALS
FICHES D'INSTALLATION
AUFBAU/MONTAGE - ANLEITUNGEN
INSTALLATIEHANDLEIDING
ИНСТРУКЦИИ ПО УСТАНОВКЕ

BERLONI BAGNO


SCHEDE DI INSTALLAZIONE

Installation diagrams
Fiches d'installation
Aufbau/montage - anleitungen
Installatiehandleiding

WAY BLOCK (CERAMICA)

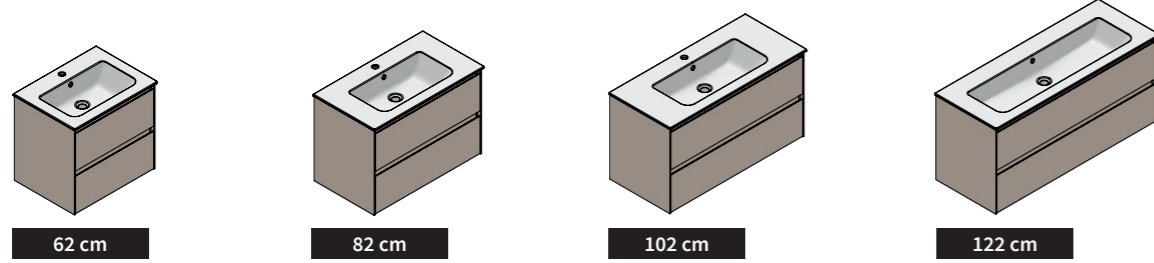


WAY BLOCK (MINERALMATT)

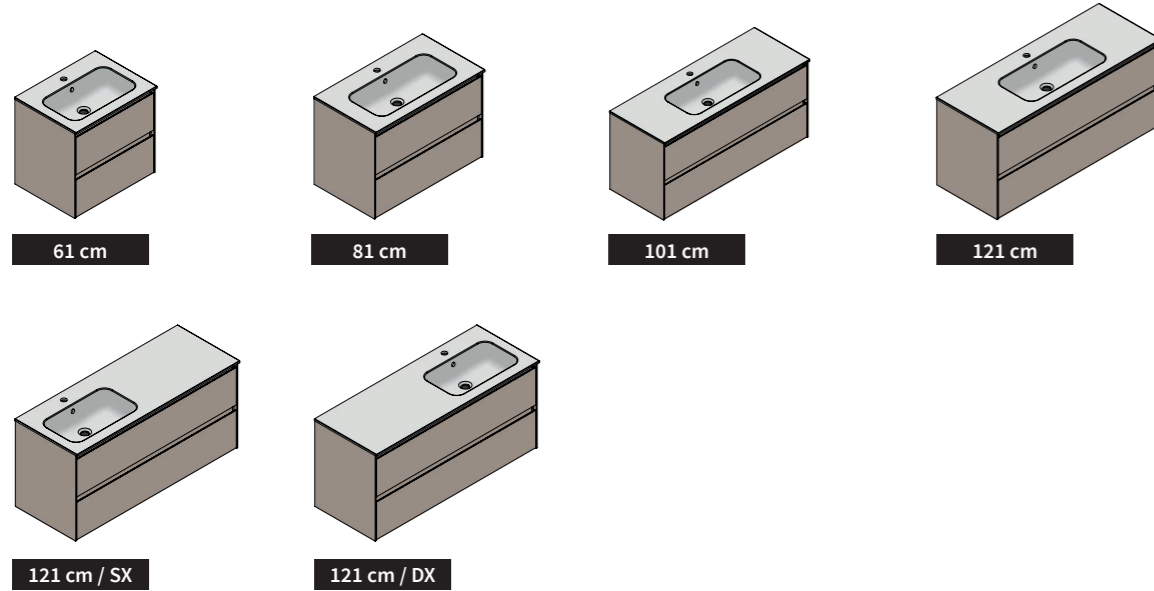


SCHEDE DI INSTALLAZIONE


Installation diagrams
Fiches d'installation
Aufbau/montage - anleitungen
Installatiehandleiding

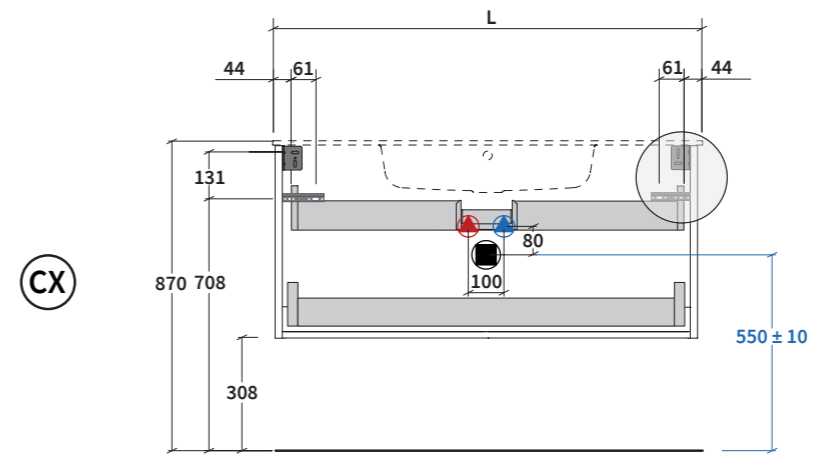

VISTA FRONTALE
Frontal view / Vue frontale / Frontalansicht / Vooraanzicht

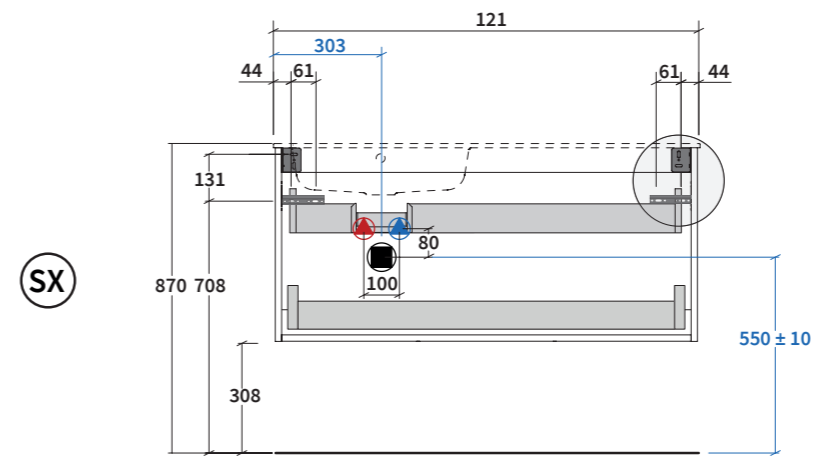


VISTA FRONTALE
Frontal view / Vue frontale / Frontalansicht / Vooraanzicht

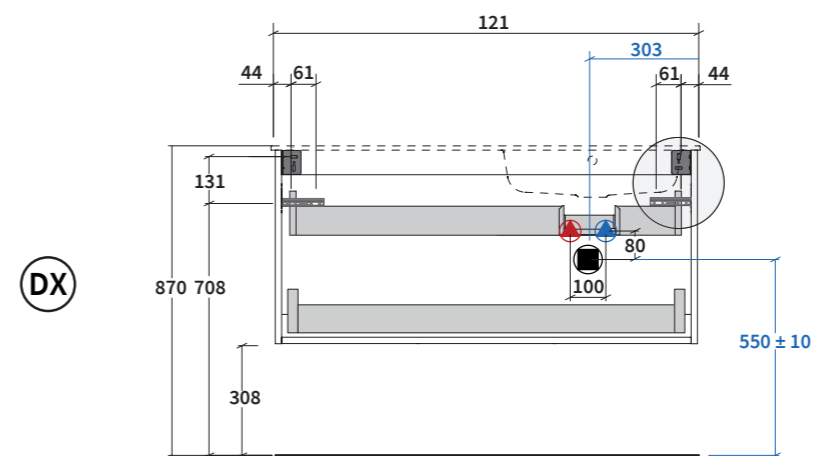


VISTA FRONTALE
Frontal view / Vue frontale / Frontalansicht / Vooraanzicht

WAY BLOCK (CERAMICA)

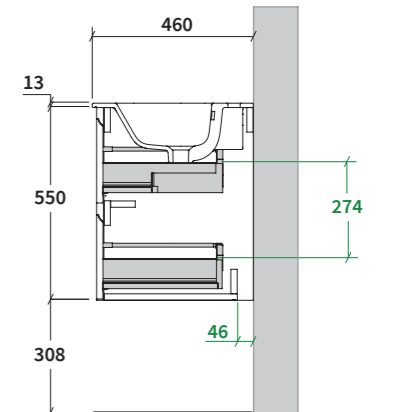

VISTA IN SEZIONE
Lateral view / Vue latérale /
Seitenansicht / Zijaanzicht

WAY BLOCK (MINERALMATT)


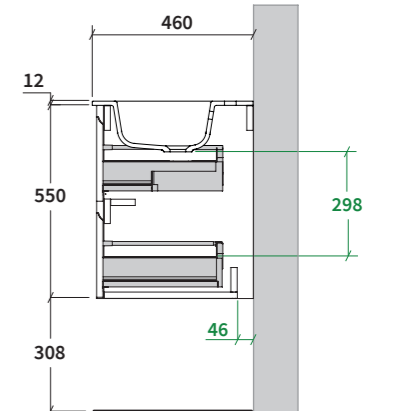


VISTA IN SEZIONE
Lateral view / Vue latérale /
Seitenansicht / Zijaanzicht



Sifone consigliato
Siphon recommended
Siphon recommandé
Empfohlener Siphon
Aanbevolen sifon


COD. SI IS.2 € 50

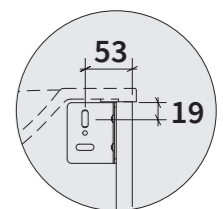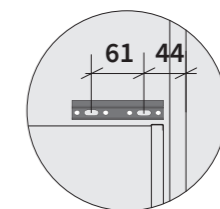


SCHEDE DI INSTALLAZIONE

Installation diagrams
Fiches d'installation
Aufbau/montage - anleitungen
Installatiehandleiding


WAY BLOCK (CERAMICA)

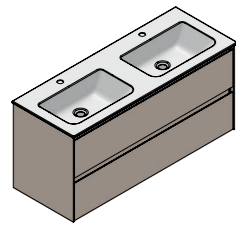


122 cm / 2X

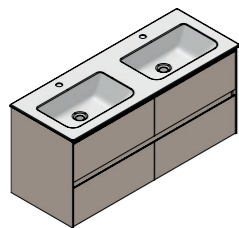

122 cm / 2X

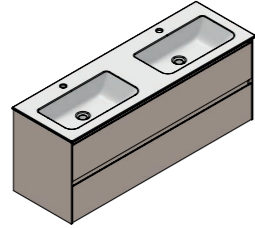


142 cm / 2X

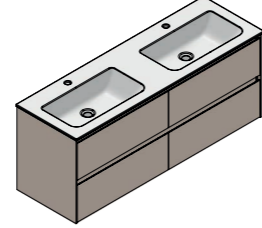


142 cm / 2X


WAY BLOCK (MINERALMATT)

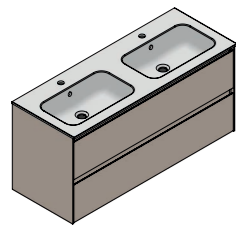


121 cm / 2X

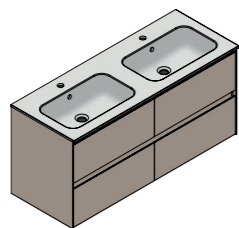

121 cm / 2X

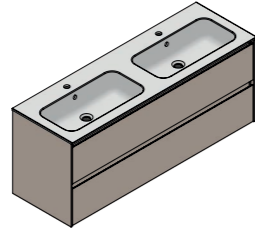


141 cm / 2X

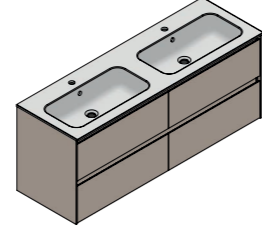


141 cm / 2X

SCHEDE DI INSTALLAZIONE


Installation diagrams
Fiches d'installation
Aufbau/montage - anleitungen
Installatiehandleiding

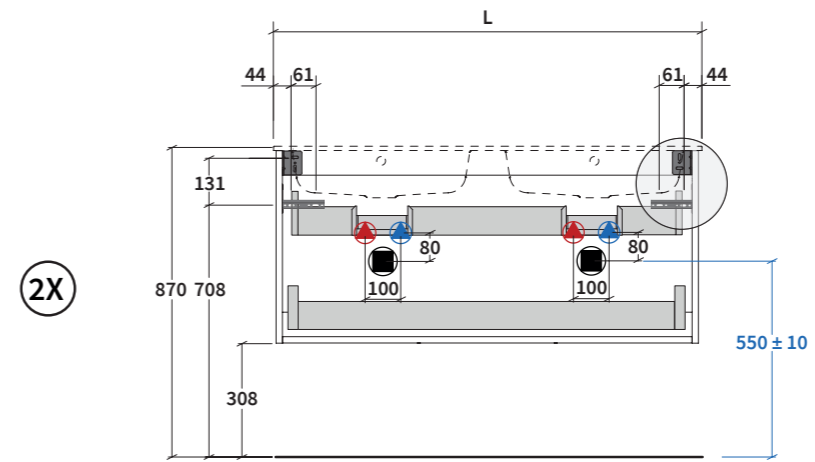


VISTA FRONTALE
Frontal view / Vue frontale / Frontalansicht / Vooraanzicht

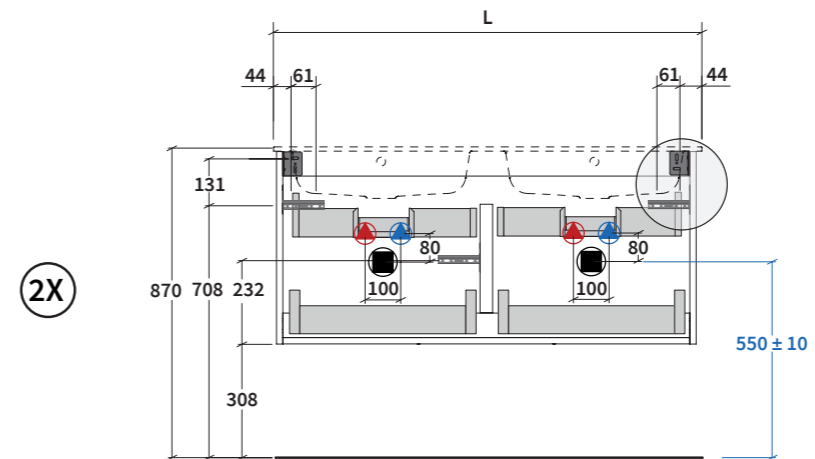


VISTA FRONTALE
Frontal view / Vue frontale / Frontalansicht / Vooraanzicht

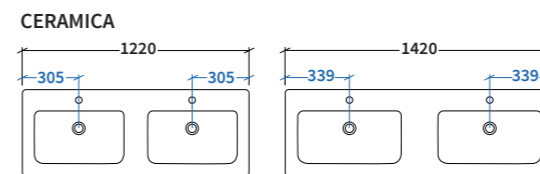


VISTA IN PIANTA
Top view / Vue de dessus / Ansicht von Oben / Boveraanzicht

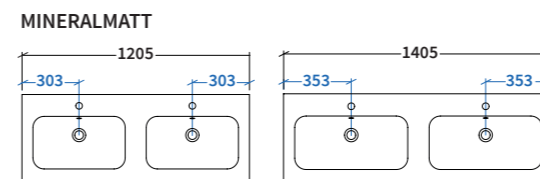

VISTA IN PIANTA
Top view / Vue de dessus / Ansicht von Oben / Boveraanzicht

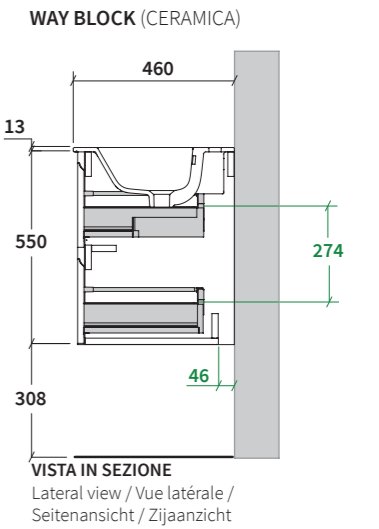

VISTA IN SEZIONE
Lateral view / Vue latérale /
Seitenansicht / Zijanzicht


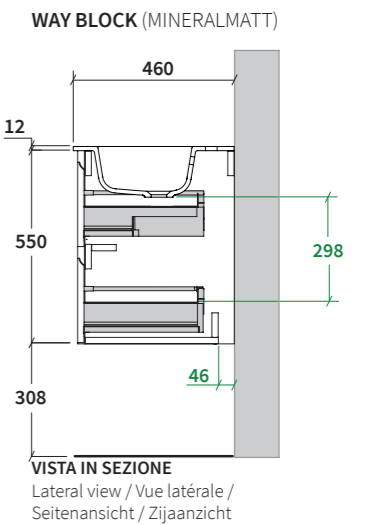


VISTA IN SEZIONE
Lateral view / Vue latérale /
Seitenansicht / Zijanzicht



Sifone consigliato
Siphon recommended
Siphon recommandé
Empfohlener Siphon
Aanbevolen sifon

COD. SI IS 2 € 50

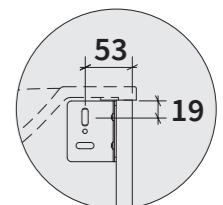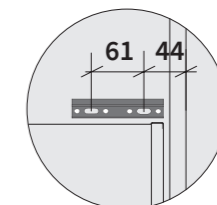

SCHEDE DI INSTALLAZIONE

Installation diagrams
Fiches d'installation
Aufbau/montage - anleitungen
Installatiehandleiding


WAY ROUND (CERAMICA)



62 cm




82 cm

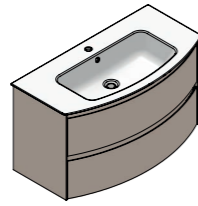


102 cm

SCHEDE DI INSTALLAZIONE


Installation diagrams
Fiches d'installation
Aufbau/montage - anleitungen
Installatiehandleiding

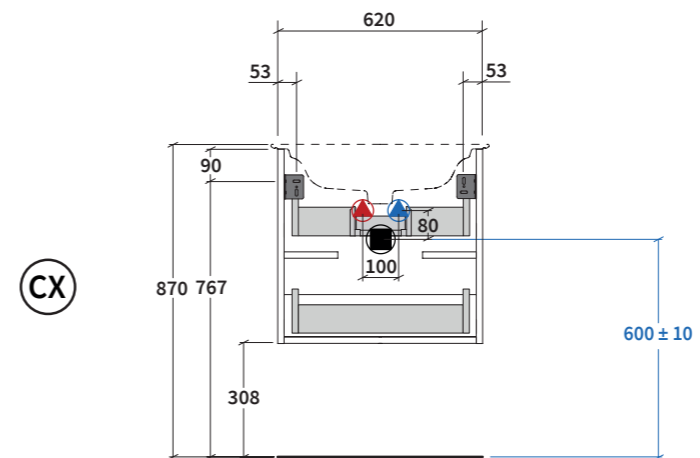

VISTA FRONTALE
Frontal view / Vue frontale / Frontalansicht / Vooraanzicht

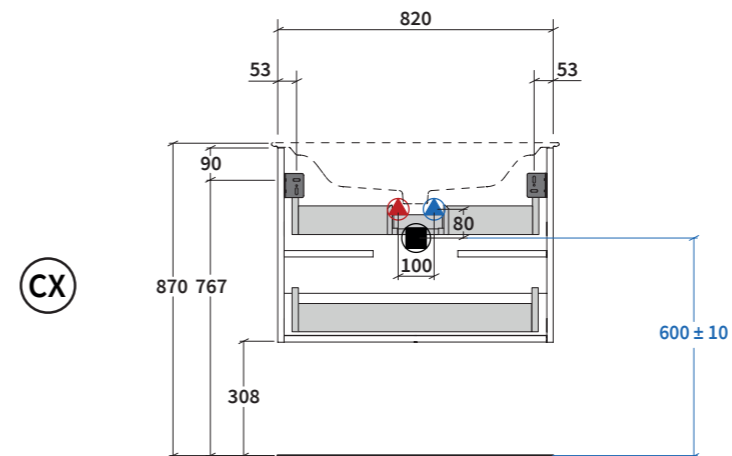


VISTA FRONTALE
Frontal view / Vue frontale / Frontalansicht / Vooraanzicht

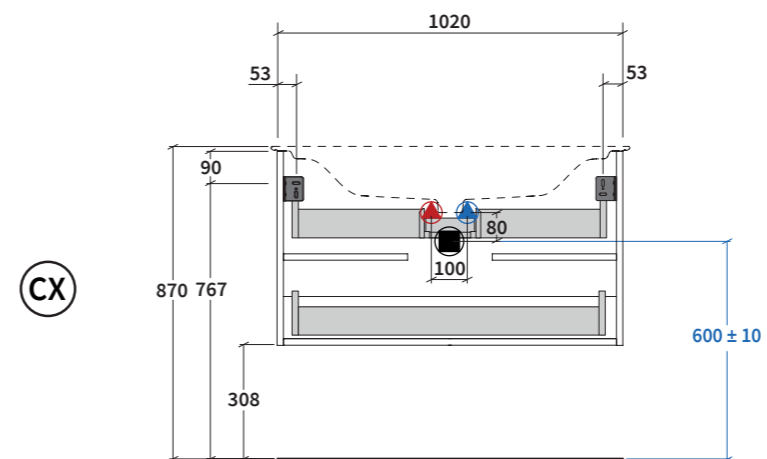

VISTA FRONTALE
Frontal view / Vue frontale / Frontalansicht / Vooraanzicht

WAY ROUND (CERAMICA)

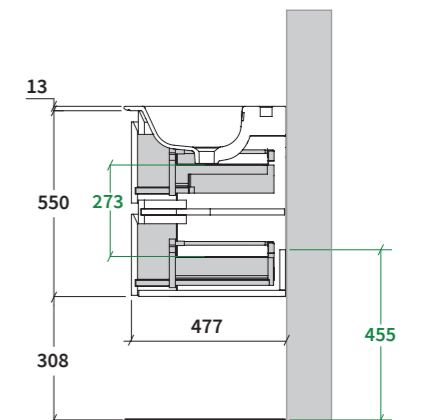

VISTA IN SEZIONE
Lateral view / Vue latérale /
Seitenansicht / Zijaanzicht



Sifone consigliato

Siphon recommended
Siphon recommandé
Empfohlener Siphon
Aanbevolen sifon

COD. SI IS 2 € 50

BERLONI BAGNO

Via G. di Vittorio 1
61034 Fossombrone (PU)
ITALY
T. +39 0721 725523
info@berlonibagno.com